



Optical Power Monitors


IPM-8

Product Overview


Santec's IPM-8 is an integrated tap-monitor and high dynamic range log-amplifier module for any DWDM application. This device detects optical signal, and calculates to absolute optical power using a calibration data. The optical power data can be accessed from electrical communication interface.

Features

- Small package
- Good accuracy
- Wide dynamic range
- I²C and RS-232C interface

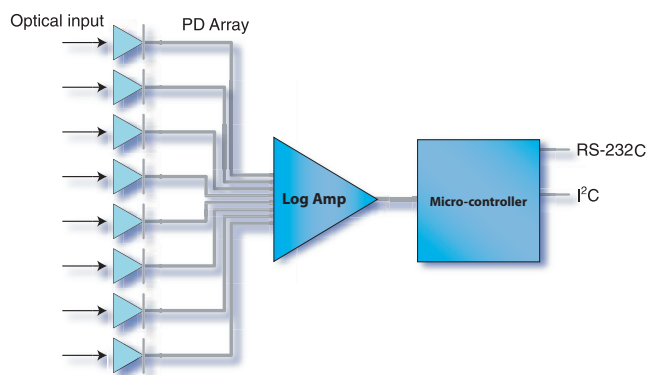

Dimensions Unit [mm]

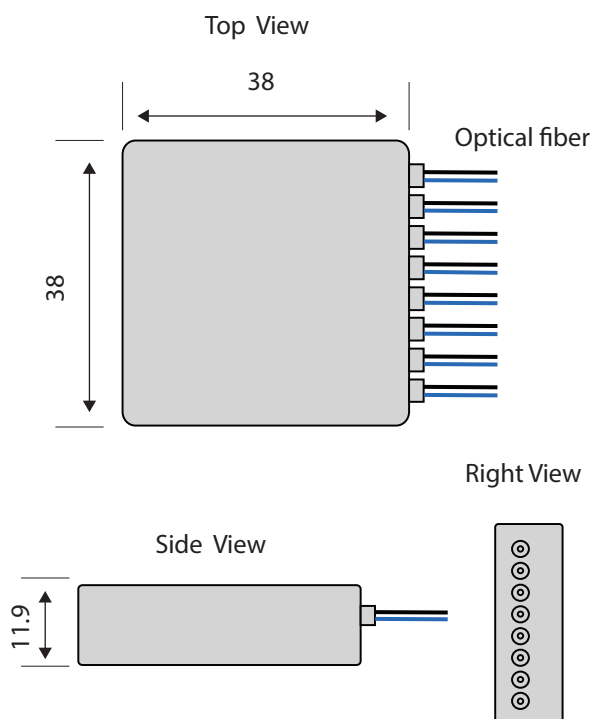

Pin#	Name	Comment
1	POWER_A	DC 5V supply (for analog circuit)
2	AGND	DC GND (for analog circuit)
3	POWER_D	DC 5V supply (for digital circuit)
4	DGND	DC GND (for digital circuit)
5	TX	RS-232C
6	RX	RS-232C
7	DGND	DC GND (RS-232C / I ² C)
8	SCL	I ² C Clock
9	SDA	I ² C Data In
10	RESET	N / W Reset

Specifications

Parameter		Unit		Type		Notes
Tap ratio		Typ.	%	2%	10%	
Channel number		-	-	8		
Wavelength range		-	THz (nm)	196.40 to 191.30 (1526.44 to 1567.13)		L-band is available
Insertion loss		Max.	dB	0.5	0.8	Dependent built-in IPD's tap ratio
Polarization dependent loss		Max.	dB	0.1		
Power accuracy		-	dB	-0.4	+0.4	@25 °C
		-	dB	- 0.75	+ 0.75	All condition
Operating optical input power		-	dBm	- 17 to +20	- 30 to +10	
Rating optical input power		Max.	dBm	+ 23	+ 20	
Operating temperature range		-	°C	- 5 to 70		
Supply Voltage(for analog)		-	V	5 + / - 0.25 V		Max.current: 100 mA
Supply Voltage(for digital)		-	V	5 + / - 0.25 V		Max.current: 200 mA
Power consumption		Max.	W	1.6		
Intetrface	RS-232C	Max.	kbps	38.4		
	I ² C	Max.	kHz	400		Fast mode
Response time	RS-232C	Max.	ms	50		Excluding communication time
	I ² C	Max.	ms	7.5		Excluding communication time

Calibration condition

Wavelength	1550 nm	Specified λ
Temperature	25 °C	RoomTemp.
Optical power	-	2 point calibration



Santec Japan Corporation
Tel: +81-568-79-3536

Santec Europe Ltd.
Tel: +44-20-3176-1550

Santec USA Corporation
Toll-Free: +1-800-726-8321

Santec (Shanghai) Corporation Limited
Tel: +86-21-58361261

